




CONFIGURATION GUIDE

1

Connect Airy to its power supply and turn it on by holding the *Power* button for 4 seconds.

The central logo will flash blue to indicate the activation of the configuration mode.

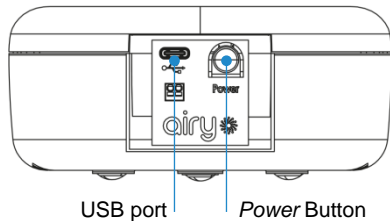 


To proceed with the configuration, it is necessary to use a device with WiFi connectivity.

Per procedere con la configurazione, è necessario utilizzare un dispositivo dotato di connettività WiFi.


2

Connect to the WiFi network **AIRY_xx_xx_xx**, where the x's represent the last 6 characters of the MAC address shown on the label.

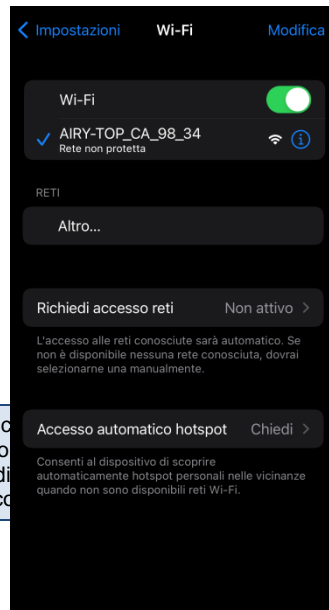

3

 From any browser, go to <http://192.168.223.1> and login using username **airy** and password the last 6 digits of the serial number shown on the label.

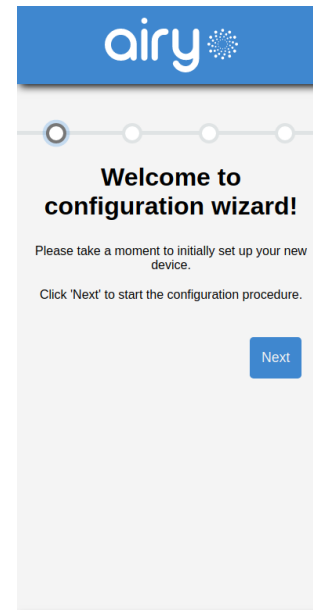

4

Select the network to connect to from those available or enter it manually.
Then enter the password if requested.

airy

1. Internet connection

Enter WiFi network information manually or scan to find the available ones.

Available networks

My-WLAN

Scan WiFi

My-WLAN

.....

.....

Previous Next

5

Optionally, configure advanced settings (e.g. DHCP or static IP).

airy

2. Advanced settings

IP settings Static IP

IP address 0.0.0.0

Subnet mask 0.0.0.0

Default gateway 0.0.0.0

DNS 1 0.0.0.0

DNS 2 0.0.0.0

Previous Next

6

Click **Save** to confirm the settings.
If the procedure is successful, Airy will exit the configuration mode and the central logo will stop flashing blue.

airy

Configuration complete!

Click 'Save', your device is now ready for use.

Previous Save



Copyright © 2022 SEMAR Srl.
All rights reserved

<http://www.isemar.biz>