



Infinerigi network

User guide

Rev. 1
07/03/2023

1. Preliminary information



Infinergi exposes its own WiFi network (henceforth **Infinergi network**) to which you can connect to access the integrated web portal. Through this, the user can access local management of the device, without the need to use an additional dedicated application (mobile or web).

Among the options that can be performed on this portal:

- Check the current status of the device
- Summary of charging sessions stored locally
- Changing configuration parameters
- Firmware update

1.1. Label with access data

Access to the Infinergi network requires some access parameters present on the label inside the device (front side of the removable front panel). The same is reported in duplicate in the Quick Guide included in the packaging.

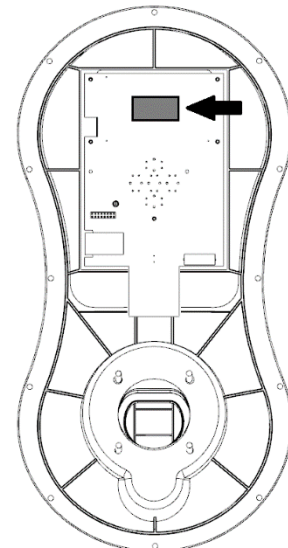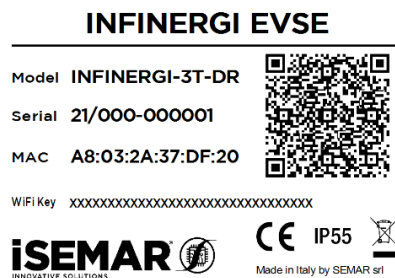

This is the information reported and required for access to the network described in chapter 3.

- **WiFi Key:** security key to access the Infinergi network
- **Serial:** serial code to be used as a password for accessing the web interface

2. Activation mode

The activation method of the Infinergi network is different depending on the firmware version of the device.

Starting from version 3.0.0, the user can change the behavior of the network by choosing from the following options:


 
- Network disabled
- Manual activation (default) according to the method described in paragraph 2.1
- Network always active

For all previous firmware versions, the WiFi network is always active and cannot be deactivated.

2.1. Manual activation

The Infinergi network is activated by pressing one or more buttons on the Infinergi front panel. The buttons to press are different depending on the device model.

In any case, activation occurs by keeping the buttons pressed for between 5 and 10 seconds. During this window, the user is notified with a white flash of the backlit logo.

MODEL	BUTTONS	PRESSURE DURATION
Without display		Between 5 and 10 seconds
With display		Between 5 and 10 seconds

3. Access mode

1. Connect to the WiFi network with SSID *INFINERGI_xx_xx_xx*. The x's represent the last characters of the MAC address shown on the 1.1 label.
2. Use the code shown in the "WiFi Key" item on the 1.1 label as a security key.
3. Open any web browser and navigate to <http://192.168.223.1>.



If Infinergi is connected to a WiFi network, the same web portal can be reached from any other device that is on the same network.

In this case, you need to navigate to http://infinergi_xx_xx_xx.local

4. Log in using the credentials described in the following paragraph.

3.1. Login credentials

The web interface can be accessed with two levels of privileges: *user* and *admin*.

Logging in as a user (username *infinergi*) allows navigation among the various sections, except for the administrative settings.

In this case the password to use is equal to the last 6 characters of the "Serial" item shown on the label of 1.1.

Access to the administrative settings (admin *username*) is done using the entire "Serial" item shown on the label described in 1.1 as a password.

For example, the access login credentials for a device with serial number 21/001-000001 are the following:

	User access	Admin access
Username	infinergi	admin
Password	000001	21/001-000001

Copyright

The information contained in this manual is the property of SEMAR Srl. Copying and replication of the contents are prohibited.

Copyright © 2024 SEMAR Srl. All rights reserved.